PLEASE KEEP ME WITH YOUR PROOF OF PURCHASE FOR FUTURE REFERENCE.



ASSEMBLY INSTRUCTIONS - BALCONY PARASOL

(13602164 - DOVE)

(13602154 - GREY)

(13602144 - GREEN)

ATTENTION:

- 1. Please read these instructions carefully before assembly
- 2. Although assembly only requires 1 person it is advised that a second person be present to help place into position when fully assembled.

For more information regarding maintenance of your furniture please visit http://www.hartmanuk.co.uk/after_care_videos.html

Component's				
Parts List	Parts Picture	Description	Q'ty	Component no.
A		Parasol	1	13602164A 13602154A 13602144A
В		Pole	1	13602164B 13602154B 13602144B
С		Cover	1	13602164C 13602154C 13602144C

For replacement or lost spare parts please go to http://faq.hartmanuk.co.uk/spares/

Should you have any queries about your furniture your first point of contact should be the retailer from whom you purchased your product.

PLEASE KEEP ME WITH YOUR PROOF OF PURCHASE FOR FUTURE REFERENCE.



 
ASSEMBLY INSTRUCTIONS - BALCONY PARASOL

Step 1

Press the spring-button of the part A while inserting the part B pole until it locks in place (the springbutton should pop into the hole in the pole).


Step 2

We recommend that you secure the parasol to one parasol base (sold separately).





Turn the crank handle clockwise to open the parasol.

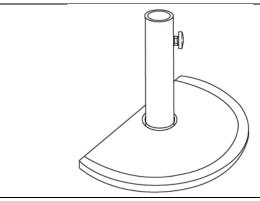

Step 4

Turn the crank handle counter clockwise to close the parasol.



Step 5

TO CLOSE THE PARASOL IT MUST BE IN THE UPRIGHT POSITION.



- IMPORTANT! Always close/put down the parasol when not in use. Do not use or assemble the parasol in heavy winds, rain, thunderstorms or if it's snowing. In these weather conditions, we recommend to fold down or disassemble the parasol. Disassemble by following the setup steps in this manual.
- IMPORTANT! The parasol must be secured in place using a parasol base. Make sure the ground is level and firm.
- IMPORTANT! If the crank gets too hard to turn, check if the rope has come off the pulley. If you continue to turn the crank, the rope or crank handle could break.
- IMPORTANT! Placing the parasol over or near a swimming pool can cause premature fading of the canopy.
- WARNING: To prevent damage to parasol, facing the canopy against the wind.
- Assemble the parasol by following the assembly instructions carefully.
- Do not assemble the parasol on sandy, muddy or loose soil.
 Keep children and pets away while setting up the parasol.
- Children must be supervised around the parasol.
- This parasol is for outdoor use only.
- Do not light any fires under or near the parasol!
- This parasol is primarily intended to be used as a sunshade and not as wind protection.

Care for the canopy:

- Simply clean the umbrella canopy with a soft brush and mild detergent.
- Do not machine wash or machine dry.
- Do not iron.
- Air-dry the canopy thoroughly in an open position before storing for extended periods of time.

For replacement or lost spare parts please go to http://faq.hartmanuk.co.uk/spares/

Should you have any queries about your furniture your first point of contact should be the retailer from whom you purchased your product.

